




How to start battery discharge?

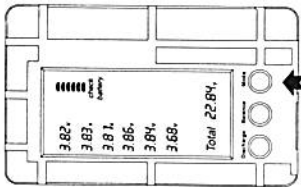

1. Push Discharge key

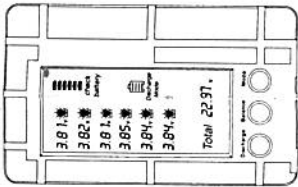


2. Discharge Mode show, symbol start flash, it means start discharge mode.

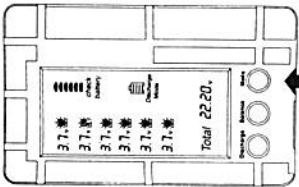

3. When battery voltage down to above setting value, signal will disappear, it means discharge is finished, push Cancel key to quit discharge mode.


P. S. You can push Cancel key to stop discharge in anytime.

4. Return to standard mode.

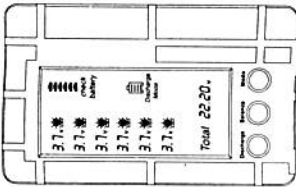

P. S. The default setting for discharge cut-off voltage is 3.9V (single Li-Polymer battery). You may adjust the cut-off voltage by yourself. Please inquiry battery supplier for storage voltage, if you use Li-Fe battery please inquiry supplier and then setting.


When screen appears below:

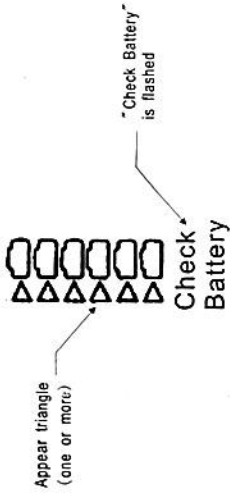

When battery voltage is different above 0.2V, The screen will appear "Check Battery", please check your battery!!

P. S. When "Check Battery" appears, it can't balance or discharge.

How to measure receiver battery? / charge for your phone?

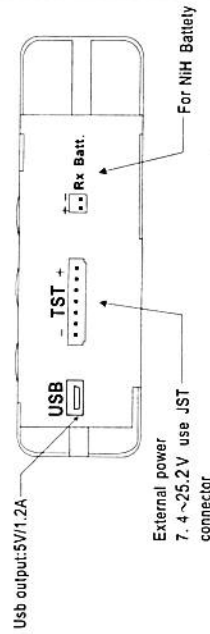

Balancer can measure voltage of receiver battery (not limit battery type), but have to use external power source!!

P. S. Using slot of receiver battery, no balance and discharge function.

Product Specification:

Outline Dimension: 107.3x61.2x16.8mm

Measureable battery type and amount:

Li-Polymer/Li-Fe 2~6 Cell
(standard voltage 7.4V~25.2V using divided voltage connector)

Receiver battery 1.2V~12V DC

(Not limit battery type, but need external power
7.4~25.2V, use JST connector)

Balance voltage setting range (lower limit) :

15V~25.2V (pre-setting value 3.3V)

Discharge voltage setting range (lower limit) :

2.2V~4.2V (pre-setting value 3.9V)